HogiPC　BIOS セットアップ手順

2008/03/24　Release1.3

USHIO Lighting Inc.

① コンソールのマザーボードの種類を確認します。
コンソールの電源を入れて最初に表示される画面（画像 1 又は 2）の赤丸の部分にマザーボードの型番が表示されるので確認してください。

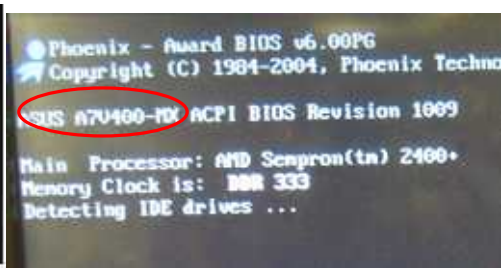

（画像 1）　　（画像 2）

② 一旦コンソールをシャットダウンして、キーボードを接続してから電源を入れなおします。

③ 画像 1 又は 2 が表示されたらキーボードの *Delete* キーを押します。

④ パスワードを要求されるので入力します。（画像 3）
Password:hesipc
BIOS 設定の画面が表示されます。（画像 4）

（画像 3）　　（画像 4）

⑤ BIOS 設定画面の上部メニューから *Exit→Load Setup Defaults*（機種により *Load Optimized Defaults*）を実行します。
※設定にはキーボードの*矢印*キー・*Enter* キーを使用します。

⑥ マザーボードの種類別に BIOS を設定してください。（次ページ以降参照）

⑦ 設定が終わったらキーボードの *F10* キーを押して OK を選択。設定を保存し、BIOS を終了します。

⑧ コンソールが正常に起動すればセットアップ完了です。

Hog iPC BIOS Settings (ASUS P4P800-VM)

Main:

-> Set the current date and time

Legacy Diskette A : Disabled

–> IDE Configuration

–> Enhanced Mode Support On : S-ATA

Advanced:

Chipset

–> Flat Panel Type: 800x600LVDS

Onboard Devices Configuration

––> Onboard Game/MIDI Port: 200/300

Power:

APM Configuration

–> Video Power Down Mode : Disabled

–> Hard Disk Power Down Mode: Disabled

–> Restore on AC Power Loss: Power On

Boot:

Boot Device Priority

–> 1st: CD-ROM (usually starts with SM-TEAC CD…)

–> 2nd: Hard Drive (usually starts with PMST340…)

Boot Settings Configuration

–> Full Screen Logo: Disabled

–> Wait For 'F1' If Error: Disabled

Security

–> Change Supervisor Password : hesipc

Hog iPC BIOS Settings (ASUS A7V400-MX)

Main:

–> Adjust System time and date

–> Legacy Diskette A: Disabled

–> Case Open Warning: Disabled

–> Set the Supervisor Password to: **hesipc**

–> Set the User Password to: **hesipc**

–> Halt On: All but: Key/Disk

Advanced:

–> Init Display First: AGP

I/O Device Configuration

–> Midi Port Address: 300

Power:

–> AC Loss Auto Restart: On

Boot:

–> First Boot Device: CDROM

–> Second Boot Device: HDD-0

–> Third Boot Device: Disabled

–> Full Screen LOGO: Disabled

Hog iPC BIOS Settings (ASUS A7N8X-VM/400)

Main:

–> Adjust System time and date

–> Legacy Diskette A : Disabled

Advanced:

Chipset

–> Primary Video : AGP/Onboard

Onboard Devices Configuration

–> Onboard Floppy Controller: Disabled

–> Onboard MIDI Port : 300

Power:

Power Up Control

–> Restore on AC/Power Loss: Power On

Boot:

–> 1st boot: TEAC CD-ROM

–> 2nd boot: Hard Disk (PS-ST…….)

Boot Settings Configuration

–> Full Screen Logo: Disabled

Security Settings

–> Change User Password: **hesipc**

Hog iPC BIOS Settings (ASUS P5B-VM)

Main:

-> Adjust Time and Date

-> Legacy Diskette A : Disabled

Advanced :

Chipset

-> North Bridge Configuration

-> Initiate Graphic Adapter : IGD

Onboard Devices Configuration

-> HD Audio Controller : Disabled

-> Onboard 1394 Controller: Disabled

-> LAN Option ROM: Disabled

-> Serial Port1 Address : Disabled

-> Parallel Port Address : Disabled

Power :

ACPI 2.0 Support : Enabled

APM Configuration

-> Restore on AC Power Loss : Power On

-> Power On By PCI Devices: Disabled

-> Power On By PCIE Devices: Disabled

-> Power On By PS/2 Keyboard: Disabled

Hardware Monitor

-> Fan Profile: Silent

Boot :

Boot Device Priority

-> 1st Boot Device : IDE: CD-ROM

-> 2nd Boot Device : HDD

-> 3rd Boot Device : Disabled